



CELLULAR PVC POST WRAP



The easiest, fastest, most cost effective way to improve the appearance and durability of exterior posts. Backed by a limited lifetime warranty against warping, rotting, cracking and splitting.

Item# KL033 | K11428 /21



TRANSFORM A TREATED POST INTO A FINISHED PVC WRAP IN NO TIME.

With our unique locking joint and mitered moulding sets, KLEERWrap Post Wraps are so simple and user-friendly, they can be installed easily by one person.

And like all KLEER products, our post wraps are covered by a Limited Lifetime Warranty that includes labor for the first two years. They never need to be painted for protection, but if you desire a color other than white, 100% acrylic latex house paint, with an LRV above 55%, can be used with amazing results.



The wrap design allows for installation on posts already attached at the top and bottom!

* Actual installation times will vary based on the general installation circumstances, the drying time of adhesives used and the expertise of the installer.



©2021 Boral Building Products Inc.



KLEERWrap® POST WRAPS PROVIDE AN EASY, COST EFFECTIVE WAY TO IMPROVE THE APPEARANCE AND DURABILITY OF EXTERIOR POSTS.

INSTALLATION INSTRUCTIONS

KLEERWrap® POST WRAPS

PVC technology as our other Kleer products and encase existing porch posts or columns with a natural wood look that, when installed properly, is virtually impervious to moisture and insects.

KLEERWrap Post Wraps can be installed by one person quickly and easily when using Kleer PVC adhesives. To ensure an elegantly finished project, each kit comes with two Bed Moulding Sets, Additional Bed, Crown, Base Cap Moulding and Outer Wrap Sets are sold separately.

PRODUCT DESCRIPTION	LENGTHS	ACTUAL INSIDE DIMENSION	ACTUAL OUTSIDE DIMENSION	POST SIZE (nominal)
4" x 4"	8', 10'	3-3/4" x 3-3/4"	4-1/2" x 4-1/2"	4" x 4"
6" x 6"	8', 10'	5-3/4" x 5-3/4"	6-1/2" x 6-1/2"	6" x 6"
8" x 8"	10'	6-1/2" x 6-1/2"	7-1/4" x 7-1/4"	6" x 6"
10" x 10"	10'	8-1/4" x 8-1/4"	9-1/4" x 9-1/4"	8" x 8"

Step 1

1

Step 2

Remove product from box and cut to length while still assembled.

2



Step 3

After removing the "loose" panel, apply a bead of Kleer Cellular PVC Adhesive (4-7 minute work time) to the outside surfaces of the tongue on each of the joints.

Step 4

Carefully stand the KLEERWrap Post Wrap around the post.

Step 5

Starting at the bottom of post wrap, "snap" the loose panel back into place by sliding your hand upward along the full length of the face.



3


4

5

6

7

See complete installation instructions for details.

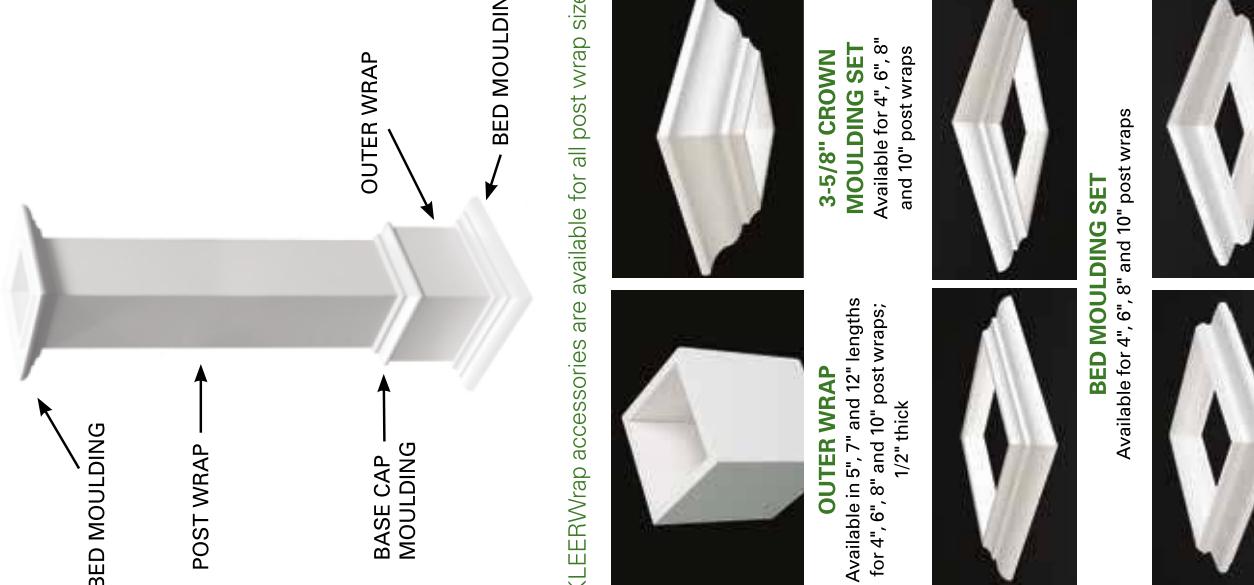

BED MOULDING SET
Available for 4", 6", 8" and 10" post wraps



OUTER WRAP
Available in 5", 7" and 12" lengths for 4", 6", 8" and 10" post wraps; 1/2" thick



BED MOULDING SET
Available for 4", 6", 8" and 10" post wraps



CROWN MOULDING SET
Available for 4", 6", 8" and 10" post wraps



KLEERWRAP POST WRAP
Available in a variety of sizes.
See chart above.
BED MOULDING SETS
Included with Post Wrap and sold separately.